


Astra Installation Guide

Components and installation notes

FAUCET COMPONENTS

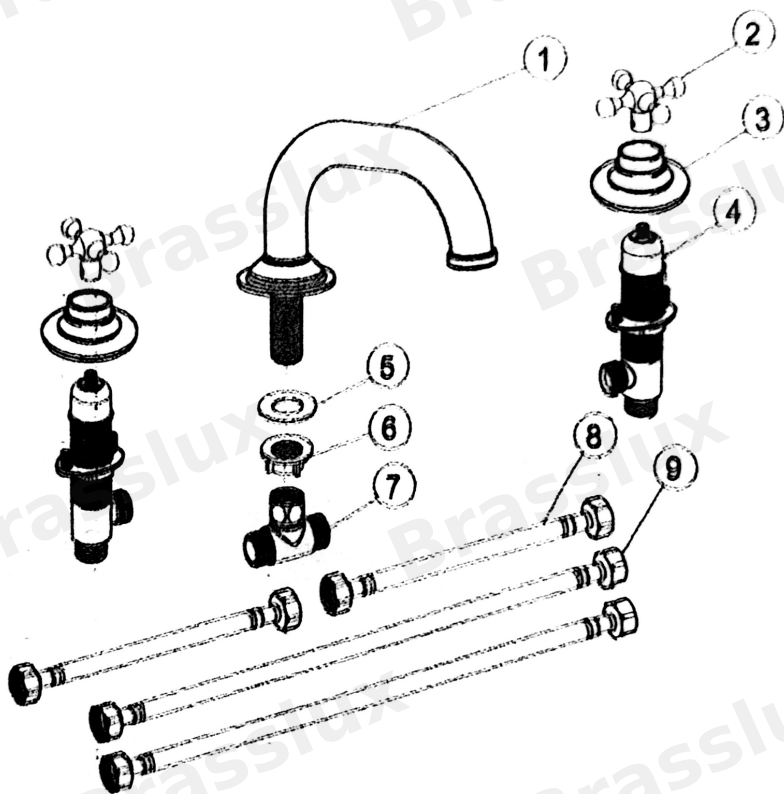

No.	DESCRIPTION	QUANTITY
1	Outlet pipe	1
2	Handle	2
3	Decorative cover	2
4	Valve body	2
5	Rubber pad	1
6	Fixed nut	1
7	Three-way	1
8	Connecting pipe	2
9	Inlet pipe	2


INSTALLATION NOTES

1. Please check that all components and tools are present.
2. Before installation ensure that all feed lines are clear of debris and on/off valve is present.
3. Ensure water pressure is between 20-125 PSI. (Includes combination of hot and cold feed lines)
4. Pictures in the manual are general in content and may not represent exactly your purchased faucet.
If you are having difficulties please contact a professional plumber.
5. If you will be away from home for an extended period you should shut off the main water supply.

Astra Installation Guide


Installation steps 1-3

STEP 1 Install the valve bodies

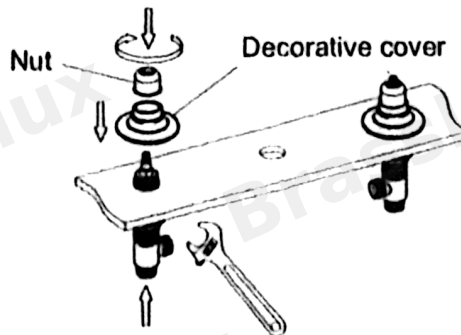


Unscrew the nut on the valve body. Pass the valve body through the mounting hole from below the installation surface. Fit the decorative cover over the valve body, then reinstall and tighten the nut. From below, use a wrench to secure the gasket and nut.

STEP 2 Attach the handles

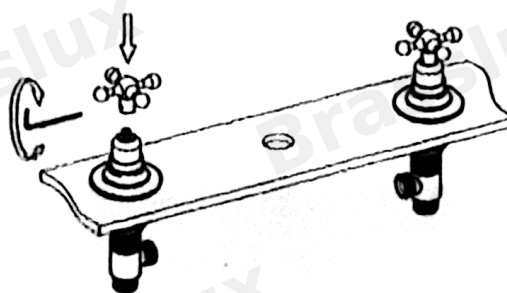

Fit each handle onto the splined stem of the valve body. Tighten the handle screws with a hex wrench.

STEP 3 Install the spout

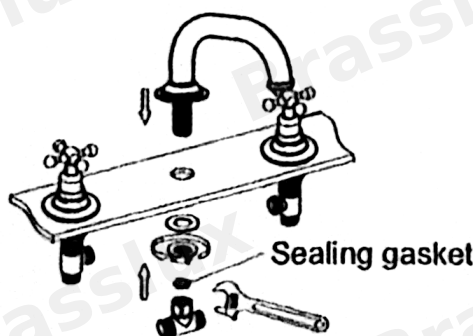

Pass the spout through its base and insert it into the center mounting hole. From below, fit the rubber pad and tighten the mounting nut onto the threaded tube. Then fit the three-way connector with its sealing gasket and tighten it with a wrench.