

Aurora™ Unlacquered Brass Bridge Kitchen Faucet with Side Sprayer

Aurora™ Unlacquered Brass Bridge Kitchen Faucet with Side Sprayer

TOOLS AND MATERIALS:



Phillips Screwdriver
Destornillador Phillips
Tournevis cruciforme



Adjustable Wrench
Llave Ajustable
Clé ajustable



Safety Glasses
Gafas de seguridad
Lunettes de protection



Hex Wrench
Llave hexagonal
Clé hexagonale



Plumbers Tape
Cinta Selladora
Para Rosca
Ruban de plomberie



Flexible Supply Lines
Linea de suministro flexible
Ligne d'alimentation flexible



Silicone Sealant
(100% Neutral Cure)
Sellador de silicona
(100% curado neutro)
Produit d'étanchéité en silicone
(à polymérisation neutre à 100 %)

INSTALLATION

1. Shut off the water supply. Remove the old faucet. Clean the mounting surface. Place faucet through mounting holes in sink. Secure the faucet assembly to the sink with the quick install nuts (1) provided. Push up the quick install nuts (1) to sink and hand-turn to tighten, as shown in the Fig 1.



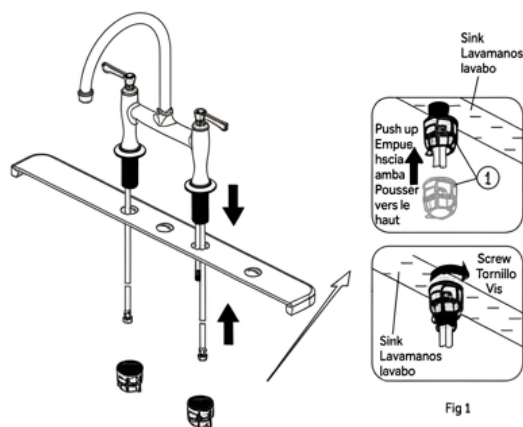


Fig 1

- 2.** Insert the sprayer flange (1) through the far right hole on the sink. Screw the sprayer mounting nut (2) onto the sprayer flange (1) shank from underneath the sink, and hand tighten. Do not overtighten.

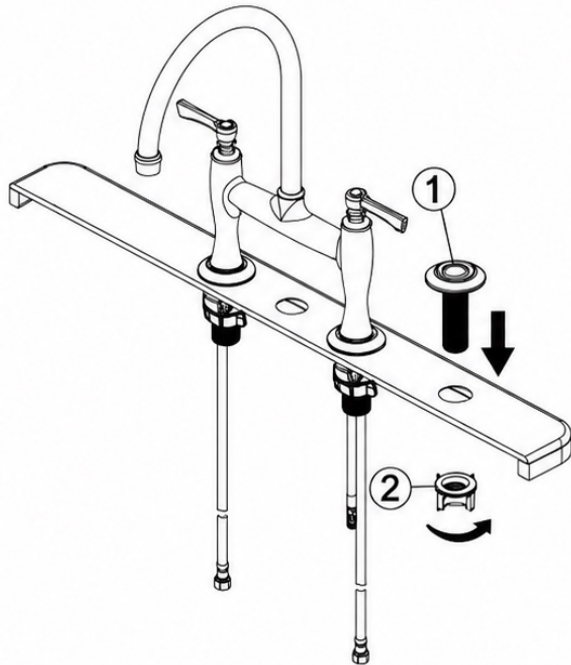


- 3.** Insert the side sprayer (1) hose down through the sprayer flange (2) and sink. Align the tabs (3 & 4) on the quick connects (5). Push the quick connector housing firmly upward and snap it onto the receiving tube tab. Pull down the hose moderately to ensure the connection has been made.

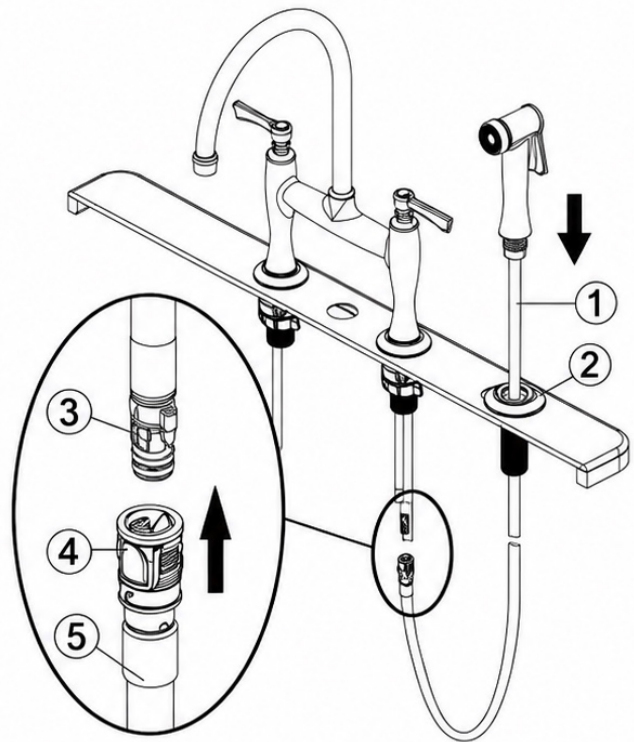


4. Making the waterline connections:

Thread the nut (1) on supply line onto outlet of water supply valve (2) and tighten with wrench. Do not overtighten.

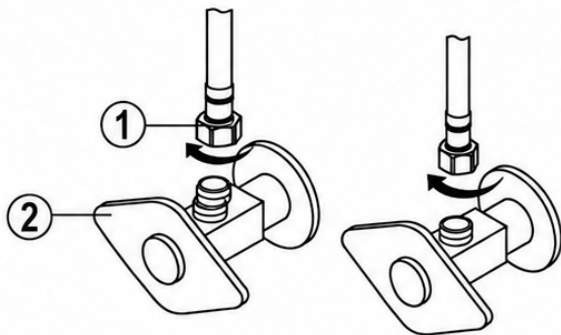

5. After installation is complete, remove aerator.

Turn on water supply and allow both hot and cold water to run for at least one minute each. While water is running, check for leaks. Replace aerator. This flushes away any debris that could cause damage to internal parts. Do not lose the gasket (1) in the aerator.

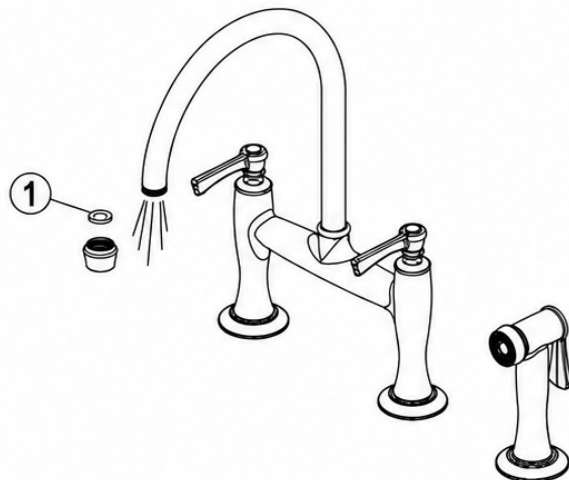

MAINTENANCE MANTENIMIENTO ENTRETIEN

If faucet leaks from spout, shut off the water supplies and replace the cartridge (1).

Note: Install cartridge (1) correctly for proper handle rotation.

