

Installation Guide

Charleston Widespread Faucet | Unlacquered Brass

HOLE DIAMETER

1-1/8" - 1-3/8"

VALVE SPACING


8" - 16"

MAX. DECK

1-3/4"


Before starting: Shut off both supplies. Check parts and holes. Protect the brass finish.

1 Install valve bodies

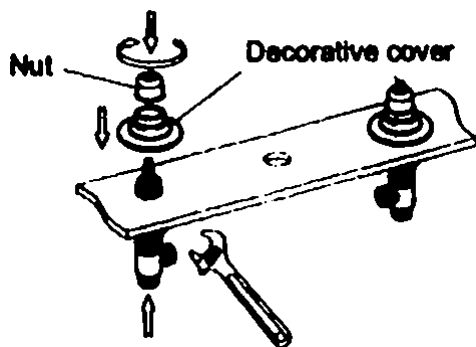


Insert valves from below: hot left, cold right. Fit the covers and upper nuts; tighten the washers and nuts underneath.

2 Fit the handles

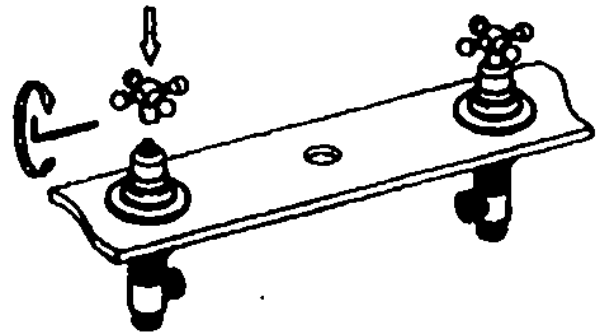


Close both valves. Fit and align the handles on the splined stems. Tighten the set screws with a hex key.

3 Mount spout & tee

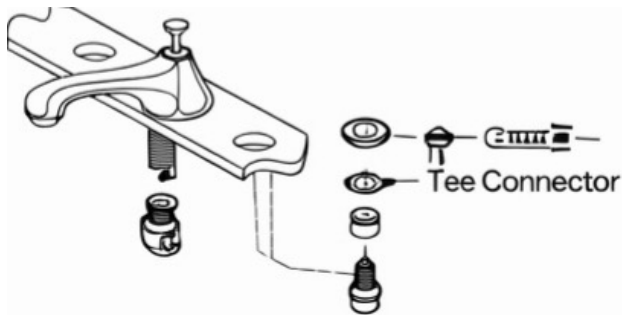

Insert the spout through the center hole. Secure its gasket, washer and nut below. Attach the tee with its sealing gasket.

4 Connect & test

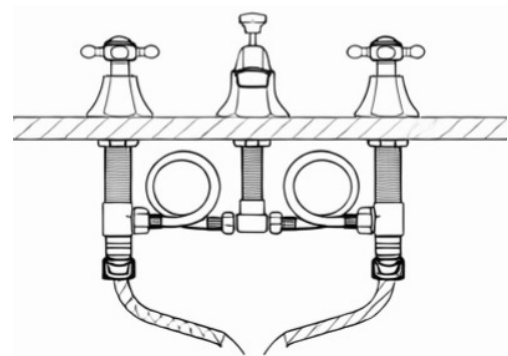

Connect valve outlets to the tee and supply hoses to hot/cold stops. Remove the aerator, flush, refit and check all joints for leaks.

US standard | Canada | Europe | Australia

US faucet connection: **1/2-14 NPSM**. Match supply hose ends and any required adapters to your local plumbing.

Keep hoses unkinked. Do not overtighten. Care: Mild soap and a soft cloth; no abrasives.