

BRSSLUX

Indiana Bathroom Faucet

INSTALLATION GUIDE | Unlacquered Brass

HOLE DIAMETER

1 $\frac{3}{8}$ "

WIDESPREAD CENTERS


8"-16"

MAX. DECK

1 $\frac{3}{4}$ "


Before starting: shut off hot and cold water. Protect the finish.

1 INSTALL VALVE BODIES

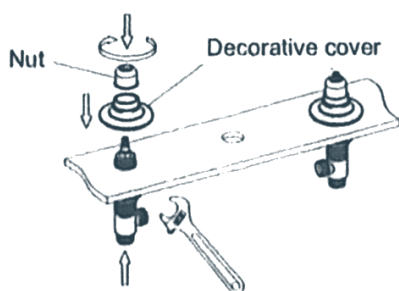


Insert valves from below: hot left, cold right.
Fit decorative covers and upper nuts.
Tighten the washers and nuts underneath.

2 FIT THE HANDLES

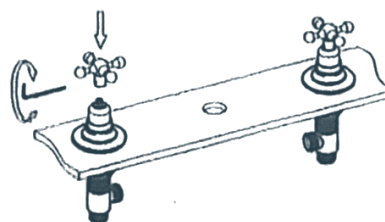


Close both valves. Fit handles onto the stems.
Align them, then tighten the set screws
with a hex key.

3 MOUNT SPOUT & TEE

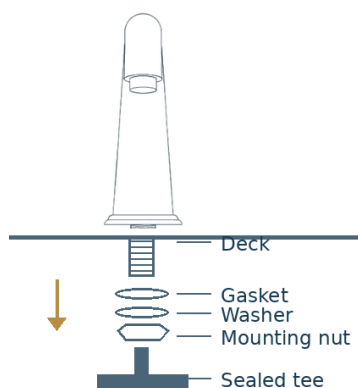

Insert the Indiana spout through the center hole.
Secure gasket, washer and nut below the deck.
Attach the tee with its sealing gasket.

4 CONNECT & TEST

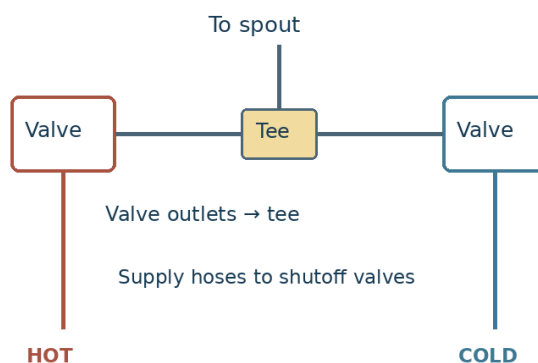

Connect valve outlets to the tee and supplies.
Remove the aerator; turn water on and flush.
Refit the aerator and check every joint for leaks.

Keep hoses unkinked. Do not overtighten fittings.

Tools: adjustable wrench and hex key. Handle styles may vary. Diagrams not to scale.