

INSTALLATION INSTRUCTIONS

Twin Handles Kitchen Faucet with Sprayer

BEFORE BEGINNING INSTALLATION:

In plumbing lines to clear any debris, turn off both supply lines after flushing.

Need Tools:



Basin Wrench



Adjustable Wrench




Teflon Tape




Silicone Sealant




Screwdriver

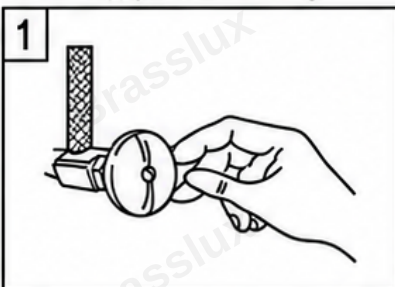


1. Shut off hot and cold water supply under sink. Plug sink drain with cloth to avoid losing small parts. Remove old faucet.

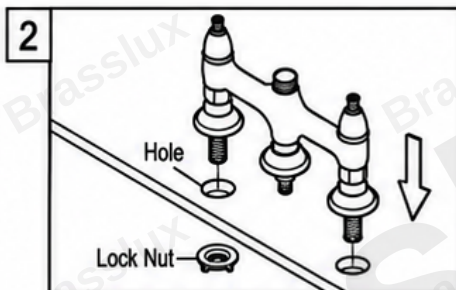


2. Set the faucet in place, insert the inlet shanks through the sink holes, and press down. Assemble the washers and lock nuts on the inlet shanks, and then tighten the nuts by hand.

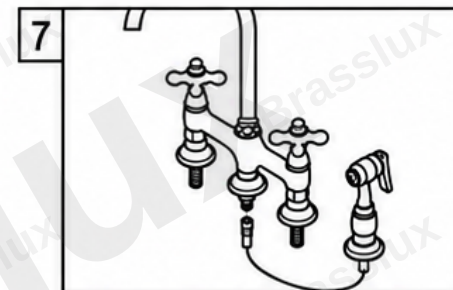


7. Insert hose through guide and apply Teflon tape to sprayer shank. Attach hose to sprayer shank.

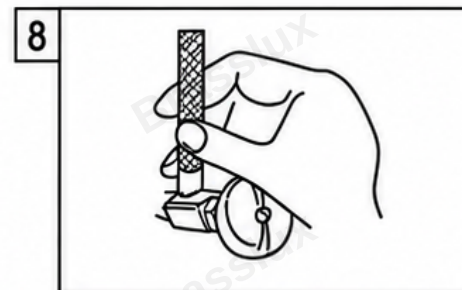


8. Turn on water supply valves and check for leaks, especially all supply line connections.

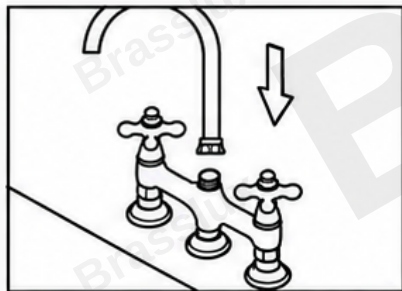


3. Install spout onto faucet body and tighten.

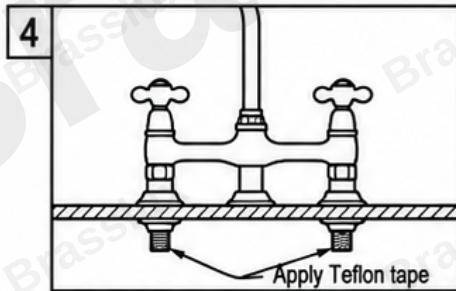


4. Apply Teflon tape to inlet shanks and connect supply lines.

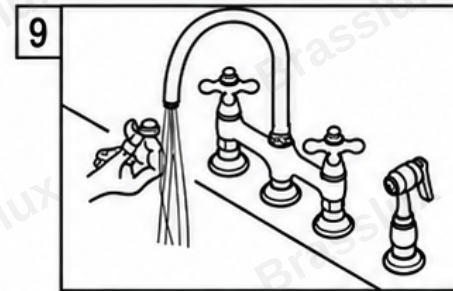


9. Remove aerator and turn on both hot and cold valves, let water run for at least one minute, this will clear any debris left in the line, reinstall aerator.

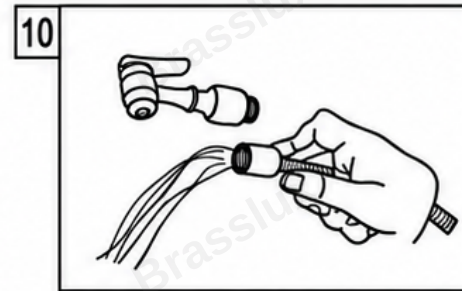

10. Remove spray head by unscrewing the sprayer in a counter clockwise direction, turn on both hot and cold valves and let water run for at least one minute, this will clear any debris left in the line.

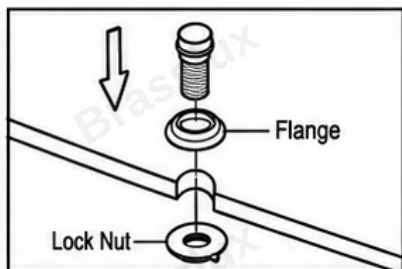

5. For models with spray head and hose, place the spray guide through the fourth hole in the sink, screw the lock nut onto the tank and tighten.

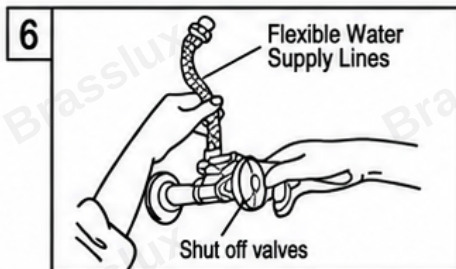

6. Apply Teflon tape to threads on faucet shank and shut off valves, connect water supply line.

Warning!!!

- Do not over-tighten during installation.
- Over-tighten may crack the valve and cause severe leak.