


# INSTALLATION INSTRUCTIONS


## Twin Handles Kitchen Faucet with or without Sprayer

### BEFORE BEGINNING INSTALLATION:


1. Flush plumbing lines to clear any debris.
2. Shut off both supply lines after flushing.

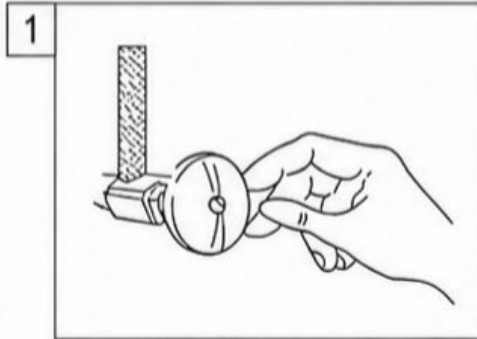


1. Shut off hot and cold water supply under sink. Plug sink drain with cloth to avoid losing small parts. Remove old faucet.

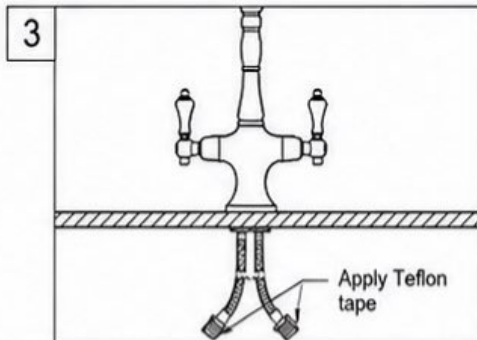


3. Apply Teflon tape to inlet shanks and connect supply lines.

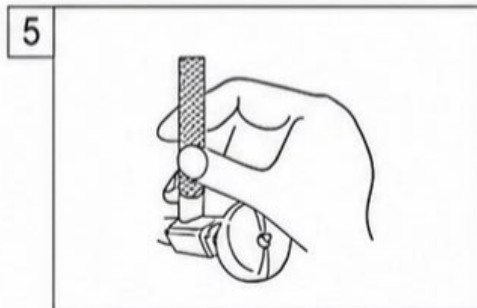

5. Turn on water supply valves and check for leaks, especially all supply line connections.

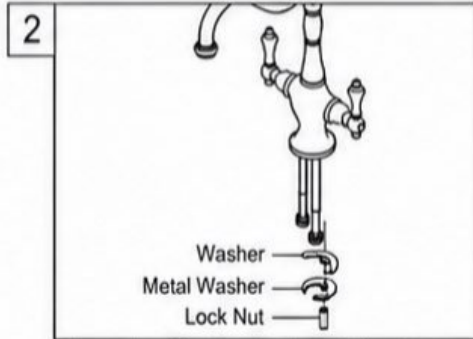

2. Insert the inlet shanks through the sink holes, and press down. Assemble the washers and lock nut on the inlet shanks, and then tighten the nuts by basin wrench.

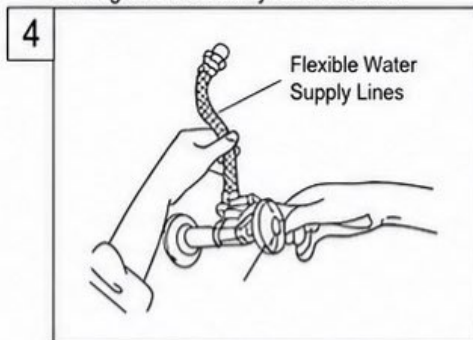

4. Apply Teflon tape to threads on faucet shank and shut off valves, connect water supply line.

### Need Tools:



Basin Wrench



Adjustable Wrench



Teflon Tape




Silicone Sealant



Screwdriver

### Parts:

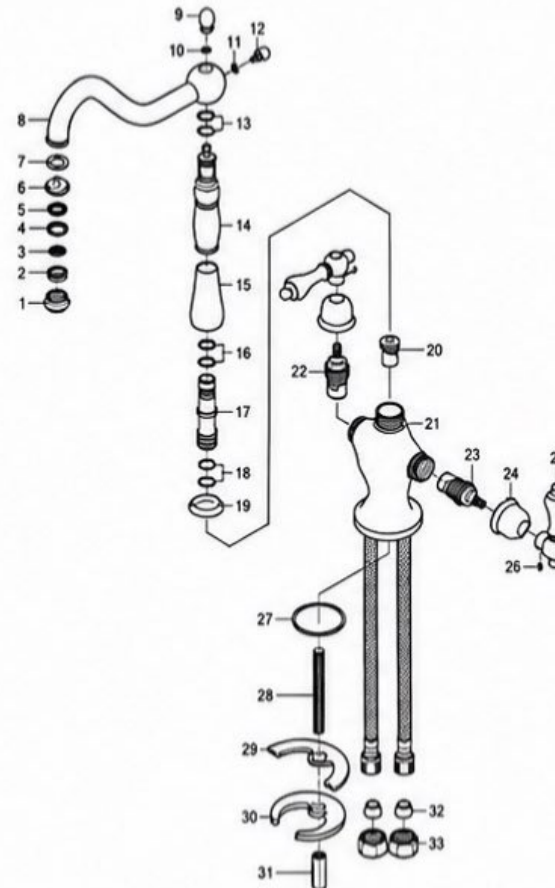

### Replacement Parts:



Hot Cartridge:  
KSRPLC400CHC



Cold Cartridge:  
KSRPLC400CCC



Handle: KSH3601AL

## Warning!!!

- Do not over-tighten nut during installation.
- Over-tighten may crack the valve and cause severe leak.